
3300A SERIES HOLDERS & STOPS SURFACE MOUNT, ADJUSTABLE

3310A HOLD-OPEN

• 3320A STOP

3330A FRICTION

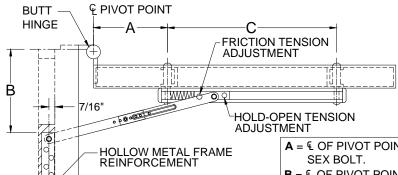

TOP VIEW

INVISIBLE HINGE MOUNTING

3/4" OFFSET PIVOT

MOUNTING

SWING CLEAR MOUNTING


(CONSULT FACTORY)


(CONSULT FACTORY)

A = & OF PIVOT POINT TO & OF FIRST

B = **E** OF PIVOT POINT TO START OF JAMB **BRACKET**

C = & OF FIRST SEX BOLT TO & OF SECOND SEX BOLT

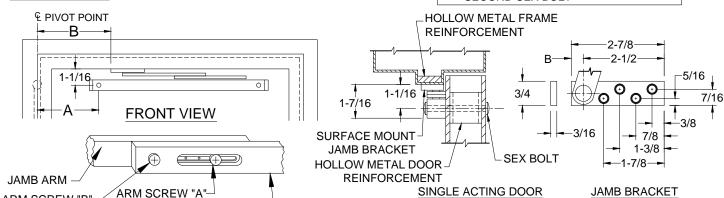



	MODEL	DOOR OPENING	OPEN BETWEEN 80° TO 110°		
DOOR	NO.		SET FOR 90° H.O.		
THICKNESS 1-3/4" TO			Α	В	С
	• 3311A				
2-1/4"	• 3321A	24 TO 29-15/16	5-1/8	5-1/8	15-15/16
, .	• 3331A				
HINGES	• 3312A				
\ \ \ &	• 3322A	30 TO 35-15/16	8-11/16	6-1/2	17-13/16
3/4"	• 3332A				
OFFSET	• 3313A				
PIVOTS	• 3323A	36 TO 42	13-7/16	7-5/8	19-9/16
	• 3333A				

SCREW DETAIL					
	QTY	WOOD	METAL		
JAMB	4	#10 x 1-1/2" FLAT HEAD, UNDER CUT WOOD SCREW	#10-32 x 1/2" FLAT HEAD MACHINE SCREW		
DOOR	2	#10-32 x 1-1/2" TRUSS HEAD & 5/16" DIA. SEX BOLT			

TO CHANGE HOLD OPEN OR STOP DEGREE

- LOOSEN "ARM SCREW A" IN SLOTTED SECTION. SEE FIG.-1. DO NOT REMOVE.
- REMOVE "ARM SCREW B" ONLY. SEE FIG.-1.
- OPEN DOOR TO DESIRED DEGREE(SEE CHART).
- POSITION "SLIDING CAM" AGAINST "SHOCK SPRING" SEE FIG.-2.
- INSTALL "ARM SCREW B" IN ARM AND SECURE.
- TIGHTEN "ARM SCREW A" SECURELY.

CAUTION:

ARM SCREW "B" MUST BE INSTALLED & BOTH SCREWS "A" AND "B" SECURED OR UNIT WILL FAIL TO HOLD POSITION

NOTES:

- 1. REVERSIBLE/ NON HANDED
- 2. FOR SINGLE ACTING DOORS ONLY
- 3. ALL DRILLING & TAPPING TO BE DONE IN FIELD.
- 4. ALWAYS REQUEST LATEST TEMPLATE/ DRAWING FOR NEW INSTALLATIONS.
- 5. ALL DIMENSIONS ARE IN INCHES.
- 6. DRAWING IS NOT TO SCALE

3300A-03 DWG



R www.abhmfg.com

E-mail: abhinfo@abhmfg.com Architectural Builders Hardware Mfg., Inc. 1222 Ardmore Ave., Itasca, IL 60143 630.875.9900; FAX 800.9FAXABH (932.9224)

© 2018 ABH Mfg., Inc. printed in USA

1 OF 1 **REVISED 02-20-18**